PHILIPS

NORELCO

AccuVac

Beard and Moustache Trimmer

with Integrated Vacuum

T970
Rechargeable
Cord/Cordless

4203 000 5343.2

Downloaded from www.Manualslib.com manuals search engine

IMPORTANT SAFETY INSTRUCTIONS

When using an electrical appliance, basic safety precautions should always be followed, including the following:

Read all instructions before using this appliance.

DANGER

To reduce the risk of electric shock:

1. Do not reach for a Trimmer that has fallen into water. Unplug immediately.
2. Do not use while bathing or in a shower.
3. Do not place or store Trimmer where it can fall or be pulled into a tub or sink. Do not place in or drop into water or other liquid.
4. Always unplug this Trimmer from the electrical outlet immediately after using, except when Trimmer is (re)charging.
5. Unplug Trimmer before cleaning.
6. When **discarding** Trimmer, unplug Trimmer to remove rechargeable battery. See Battery Removal instruction sheet.

WARNING

To reduce the risk of burns, fire, electric shock or injury to persons:

1. Close supervision is necessary when this appliance is used by, on, or near children or invalids.
2. Use this Trimmer for its intended household use as described in this manual. Do not use attachments not recommended by the Philips Electronics North America Corporation.
3. Never operate this Trimmer if it has a damaged cord or plug, if it is not working properly, if it has been dropped, damaged, or dropped into water. Return the Trimmer to an Authorized Norelco Service Location for examination and repair.
4. Keep the Trimmer and cord away from heated surfaces.
5. Never drop or insert any object into any opening. Keep air openings free of lint, hair, etc.
6. Do not charge or plug in Trimmer outdoors or where aerosol (spray) products are being used or where oxygen is being administered.
7. Do not use this Trimmer with a damaged or broken cutter, as facial injury may occur.
8. Do not operate Trimmer with the hair collection chamber removed.
9. Always attach plug to Trimmer first, then into outlet. To disconnect, turn ON/OFF switch "OFF" then remove plug from outlet.
10. To prevent possible damage to the cord, do not wrap cord around the Trimmer.
11. Never put Trimmer in direct sunlight or store in a pouch at a temperature above 140˚F.
12. This Trimmer is for use on human facial hair only. Do not use this Trimmer for any other purpose.

Charging

Charge the Trimmer fully before you start for the first time or after a long period of

Charge Indications

Low Battery

- When the battery capacity drops bel minimum level, the red low-battery indicator light starts blinking when yo switch the trimmer on or during trim to indicate that the appliance needs t charged (fig. 2).
- When this happens, there is still enou energy in the battery for one more trimming session. When the battery i completely empty, neither the motor the lights will go on. In this case you can still trim using the cord provided

Charging

- When you start charging, the green charging light starts blinking (fig. 3).
- During charging the blinking green ch light indicates the level at which the b is currently charging. The battery cap that is already available is indicated b green battery lights that burn continu (fig. 4).

Battery Full Indicator

When the battery is fully charged, the bo three green lights burn continuously and top green light blinks at a very quick rate

Battery Capacity Indication

Your AccuVac beard trimmer is equippe a battery capacity indication. This indicati becomes visible for 5 seconds every time Trimmer is switched on or off. The numb burning green lights indicates the amount battery capacity that is available.

To Charge / Recharge

- (Re)charging requires one full hour.
- Use only the cord provided.
- Battery performance is best if you re only when the battery is (almost) completely empty.
- Charging or recharging at temperatur below 40°F or higher than 95°F adve affects lifetime of battery.
- Continuously recharging or continuou using as a corded Trimmer will reduc of battery.
- You may also trim using the cord pro This Trimmer will not recharge while used corded.

1 Be certain Trimmer is OFF.

2 Connect cord to Trimmer. Plug into 120V AC outlet only. Use only the cord provided.

- An adaptor plug may be necessary fo usage in some foreign countries. Use attachment plug adaptor of the prop configuration for power outlet.

Do not charge Trimmer in a pouch or for

Downloaded from www.Manualslib.com manuals search engine

SAVE THESE INSTRUCTIONS

IMPORTANT: YOUR TRIMMER CONTAINS A NICKEL-CADMIUM RECHARGEABLE BATTERY.
See Battery Removal instruction sheet.

Features

A Patented AccuControl System with Removable Guide Comb Attachment
B Detachable Cutting Unit with 3-Dimensional Rounded Stainless Steel Cutter Blades
C Flexi-Guard Hair Deflector
D ClearView Hair Collection Chamber
E Filter
F Precision Zoom Lock Hair Length Selector with 9 Pre-select Settings
G Selected Hair Length Setting Window
H ON/Off Button
I 5 LED Battery Charge Meter
- Indicates the amount of charge remaining in batteries

J Power Cord Socket
K Cleaning Brush
L Precision Mini-Trimmer
M Cord
Travel/Storage Pouch
Full Two-Year Warranty
60-Day Money-Back Guarantee

Downloaded from www.Manualslib.com manuals search engine

S
, basic safety
wed,

ing this

shock:
nat has fallen
y.
a shower.
r where it
or sink. Do
r or other

om the
ter using,
harging.
ng.
nplug
ble battery.
n sheet.

re, electric

when this
ar children or

ded
this manual.
ecommended
h America

it has a
ot working.

Charging

Charge the Trimmer fully before you start using it for the first time or after a long period of disuse.

Charge Indications

Low Battery

- When the battery capacity drops below its minimum level, the red low-battery indicator light starts blinking when you switch the trimmer on or during trimming to indicate that the appliance needs to be charged (fig. 2).
- When this happens, there is still enough energy in the battery for one more trimming session. When the battery is completely empty, neither the motor or the lights will go on. In this case you can still trim using the cord provided.

Charging

- When you start charging, the green charging light starts blinking (fig. 3).
- During charging the blinking green charging light indicates the level at which the battery is currently charging. The battery capacity that is already available is indicated by the green battery lights that burn continuously (fig. 4).

Battery Full Indicator

When the battery is fully charged, the bottom three green lights burn continuously and the top green light blinks at a very quick rate.

Battery Capacity Indication

Your AccuVac beard trimmer is equipped with a battery capacity indication. This indication becomes visible for 5 seconds every time the Trimmer is switched on or off. The number of burning green lights indicates the amount of battery capacity that is available.

Downloaded from www.Manualslib.com manuals search engine

Cordle

1 Charge a
Unplug T
cord.

2 Turn Tri

3 If charge
connect
continue

Put It

Like many ne
AccuVac Tri
to. If you are
first time, or
brand, take t
your new Tr

Your AccuV
AccuContro
adjustable Z
hairs goof-pr
Integrated V
use.

Throw your
AccuVac Tri
precise, prof
refund you t

AccuC

The patente
Integrated V
control while
prior experie
Comb adjust
of your face
accurate. An
hard-to-reac
The patente
allows you t
lengths and
control the

erly, if it has been dropped, damaged,
ropped into water. Return the
mer to an Authorized Norelco Service
tion for examination and repair.
p the Trimmer and cord away from
ed surfaces.
er drop or insert any object into any
ning. Keep air openings free of lint,
etc.
not charge or plug in Trimmer
oors or where aerosol (spray)
ucts are being used or where oxygen is
g administered.
not use this Trimmer with a damaged
roken cutter, as facial injury may occur.
not operate Trimmer with the hair
ction chamber removed.
ays attach plug to Trimmer first, then
outlet. To disconnect, turn ON/OFF
ch "OFF" then remove plug from
et.
revent possible damage to the cord, do
wrap cord around the Trimmer.
er put Trimmer in direct sunlight or
e in a pouch at a temperature above
F.
Trimmer is for use on human facial
only. Do not use this Trimmer for any
r purpose.

VE THESE TRUCTIONS

RTANT: YOUR TRIMMER AINS A NICKEL-CADMIUM ARGEABLE BATTERY.
ery Removal instruction sheet.

tures

nted AccuControl System with
ovable Guide Comb Attachment
achable Cutting Unit with 3-Dimensional
nded Stainless Steel Cutter Blades
-Guard Hair Deflector
rView Hair Collection Chamber
r
ision Zoom Lock Hair Length Selector
9 Pre-select Settings
cted Hair Length Setting Window
Off Button
D Battery Charge Meter
icates the amount of charge remaining
batteries
er Cord Socket
ning Brush
ision Mini-Trimmer
d
el/Storage Pouch
Two-Year Warranty
Day Money-Back Guarantee

To Charge / Recharge

- (Re)charging requires one full hour.
- Use only the cord provided.
- Battery performance is best if you recharge only when the battery is (almost) completely empty.
- Charging or recharging at temperatures below 40°F or higher than 95°F adversely affects lifetime of battery.
- Continuously recharging or continuously using as a corded Trimmer will reduce life of battery.
- You may also trim using the cord provided. This Trimmer will not recharge while being used corded.

1 Be certain Trimmer is OFF.

2 Connect cord to Trimmer. Plug into any 120V AC outlet only. Use only the cord provided.

- An adaptor plug may be necessary for cord usage in some foreign countries. Use an attachment plug adaptor of the proper configuration for power outlet.

Do not charge Trimmer in a pouch or for more than 24 hours.

- It requires 1 hour to fully charge the battery, if the battery capacity is completely empty. If there is still battery capacity available, fully charging the battery will take less time.
- A fully charged Trimmer has a cordless trimming time of up to 40 minutes.

3 Disconnect the cord and unplug from electrical outlet unless you are using the Trimmer corded.

Optimize The Working Life Of The Battery

- After Trimmer has been charged for the first time, do not recharge Trimmer between trimming sessions. Continue using until the battery is completely empty.
- Discharge the battery completely twice a year by letting the motor run until it stops.
- Do not charge for more than 24 hours.
- Do not keep cord permanently plugged in.
- If Trimmer hasn't been used for a long period of time, Trimmer must be recharged for one full hour.

Corded Trimming

1 Connect cord provided to Trimmer.

2 Plug Trimmer into electrical outlet.

3 If battery is completely empty, wait a few minutes before switching Trimmer on.

4 Turn Trimmer ON and begin trimming.

5 Turn Trimmer OFF and unplug.

6 Do not use Trimmer corded when battery is fully charged.

NOTE: Trimmer does not recharge during cord trimming.

the length of your facial hair. The Pater
AccuControl System and Zoom Lock H
Length Selector for professional, goof-p
results every time.

AccuVac System

The AccuVac System with Integrated V
activated automatically as soon as you
the trimmer on. It collects cut hairs dur
kind of use, i.e. trimming with or witho
attachment and contouring. The flexibl
guide follows the contours of the face
Flexi-Guard Hair Deflector directs cut h
towards the nozzle of the vacuum mec
It is recommended that you empty the
Collection Chamber after each trimmin
session. When trimming long, dense be
may also be necessary to empty the Ha
Collection Chamber during the trimmin
session in order to maintain optimal su
performance (also see 'Cleaning' sectio
Collection Chamber').

- To ensure optimal functioning of th
AccuVac System, do not cut off mo
approx. 7mm of your overall beard
at a time. If you want to cut your b
shorter, repeat the process one or
times.

Trimming

- Use this Trimmer for its intended household use as described in this
- Always comb your beard and/or m
with a fine comb before you start t
- If you are trimming for the first tim
careful. Do not move the Trimmer
Make smooth and gentle movemen

Trimming With AccuControl G Comb Attachment

- Guide Comb Attachment must be
Trimmer in order to use the Zoom

1 Turn the Zoom Lock to the desir
trimming length setting (see table)
setting will appear in the window
the Zoom Lock (fig. 5).

- If you are trimming for the first tim
by using the maximum trimming le
setting #9 to prevent accidentally t
hairs too short. As you become fam
with the settings, adjust Zoom Loc
desired trimming length. Zoom Loc
"click" into position at each setting.

Downloaded from www.Manualslib.com manuals search engine

you start using it
period of disuse.

drops below its
-battery
when you
uring trimming
ce needs to be

s still enough
he more
e battery is
the motor or
case you
provided.

he green
(fig. 3).
g green charging
which the battery
attery capacity
dicated by the
rn continuously

ed, the bottom
ously and the
quick rate.

ion

s equipped with
his indication
every time the
The number of
he amount of
.

e

ull hour.

Cordless Trimming

1. Charge according to directions. Unplug Trimmer from outlet and remove cord.
2. Turn Trimmer ON to begin trimming.
3. If charge runs out while trimming, simply connect cord provided to Trimmer and continue trimming.

Put It To The Test

Like many new products, your Norelco AccuVac Trimmer may take a little getting used to. If you are using an electric Trimmer for the first time, or if you've been using a different brand, take the time to acquaint yourself with your new Trimmer.

Your AccuVac Trimmer features the Patented AccuControl System combined with an adjustable Zoom Lock to make trimming facial hairs goof-proof. The AccuVac System with Integrated Vacuum collects cut-off hairs during use.

Throw your scissors away and put your new AccuVac Trimmer to the test. We guarantee precise, professional, results or Norelco will refund you the full purchase price, guaranteed!

AccuControl System

The patented AccuControl System with Integrated Vacuum puts you in complete control while trimming your facial hairs with no prior experience needed. The flexing Guide Comb adjusts automatically to hug the contours of your face for a trim that is both even and accurate. And, it's easy to maneuver over those hard-to-reach areas such as the throat and chin. The patented Zoom Lock Hair Length Selector allows you to choose among 9 preset hair lengths and locks into position so you can control the exact hair length you desire or vary the length of your facial hair. The Patented AccuControl System and Zoom Lock Hair Length Selector for professional, goof-proof results every time.

Features

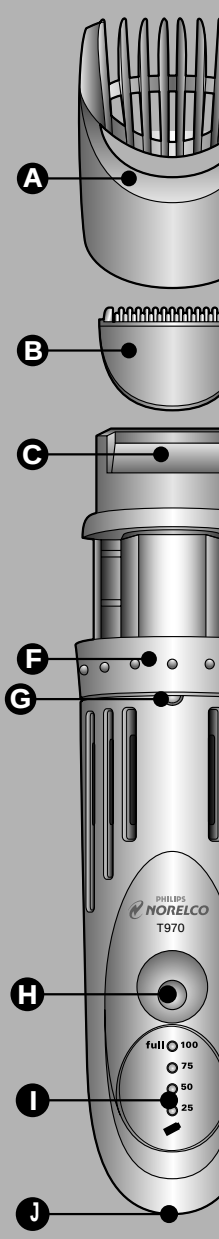

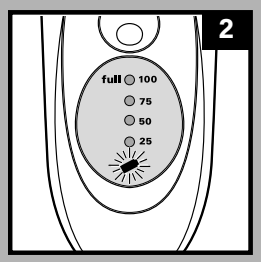

Downloaded from www.Manualslib.com manuals search engine

best if you recharge
s (almost)

at temperatures
han 95°F adversely
y.
g or continuously
mer will reduce life

g the cord provided.
echarge while being

OFF.

mer. Plug into any
Use only the

e necessary for cord
ountries. Use an
r of the proper
outlet.

pouch or for more

ly charge the
apacity is completely
ttery capacity
he battery will take

r has a cordless
40 minutes.

nd unplug from
you are using the

ng Life

n charged for the
rge Trimmer
ons. Continue using
pletely empty.
ompletely twice a
or run until it stops.
e than 24 hours.
nanently plugged in.
used for a long
r must be recharged

AccuVac System

The AccuVac System with Integrated Vacuum is activated automatically as soon as you switch the trimmer on. It collects cut hairs during every kind of use, i.e. trimming with or without comb attachment and contouring. The flexible hair guide follows the contours of the face and the Flexi-Guard Hair Deflector directs cut hairs towards the nozzle of the vacuum mechanism. It is recommended that you empty the Hair Collection Chamber after each trimming session. When trimming long, dense beards it may also be necessary to empty the Hair Collection Chamber during the trimming session in order to maintain optimal suction performance (also see 'Cleaning' section, 'Hair Collection Chamber').

- To ensure optimal functioning of the AccuVac System, do not cut off more than approx. 7mm of your overall beard length at a time. If you want to cut your beard shorter, repeat the process one or more times.

Trimming

- Use this Trimmer for its intended household use as described in this manual.
- Always comb your beard and/or moustache with a fine comb before you start trimming.
- If you are trimming for the first time, be careful. Do not move the Trimmer too fast. Make smooth and gentle movements.

Trimming With AccuControl Guide Comb Attachment

- Guide Comb Attachment must be on Trimmer in order to use the Zoom Lock.

1 Turn the Zoom Lock to the desired trimming length setting (see table). The setting will appear in the window below the Zoom Lock (fig. 5).

- If you are trimming for the first time, start by using the maximum trimming length setting #9 to prevent accidentally trimming hairs too short. As you become familiar with the settings, adjust Zoom Lock to desired trimming length. Zoom Lock will “click” into position at each setting.

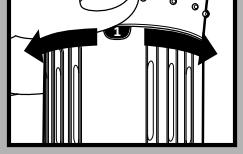

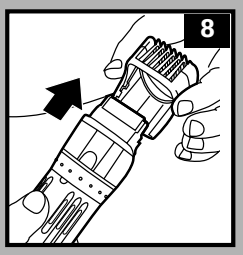

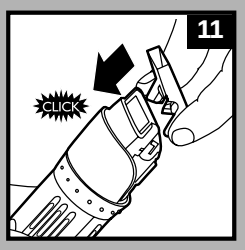

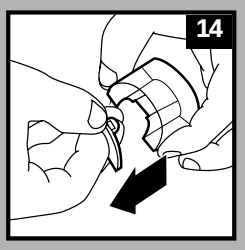

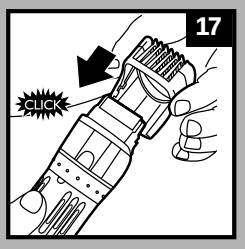

Trimming Length

#1	Stubble Length or
#2	Short
#3	
#4	
#5	Medium
#6	
#7	
#8	
#9	Long

Downloaded from www.Manualslib.com manuals search engine

Cordless Trimming

1 Charge according to directions. Unplug Trimmer from outlet and remove cord.

2 Turn Trimmer ON to begin trimming.

3 If charge runs out while trimming, simply connect cord provided to Trimmer and continue trimming.

Put It To The Test

Like many new products, your Norelco AccuVac Trimmer may take a little getting used to. If you are using an electric Trimmer for the first time, or if you've been using a different brand, take the time to acquaint yourself with your new Trimmer.

Your AccuVac Trimmer features the Patented AccuControl System combined with an adjustable Zoom Lock to make trimming facial hairs goof-proof. The AccuVac System with Integrated Vacuum collects cut-off hairs during use.

Throw your scissors away and put your new AccuVac Trimmer to the test. We guarantee precise, professional, results or Norelco will refund you the full purchase price, guaranteed!

AccuControl System

The patented AccuControl System with Integrated Vacuum puts you in complete control while trimming your facial hairs with no prior experience needed. The flexing Guide Comb adjusts automatically to hug the contours of your face for a trim that is both even and accurate. And, it's easy to maneuver over those hard-to-reach areas such as the throat and chin. The patented Zoom Lock Hair Length Selector allows you to choose among 9 preset hair lengths and locks into position so you can control the exact hair length you desire or vary the length of your facial hair. The Patented AccuControl System and Zoom Lock Hair Length Selector for professional, goof-proof results every time.

AccuVac System

The AccuVac System with Integrated Vacuum is activated automatically as soon as you switch the trimmer on. It collects cut hairs during every kind of use, i.e. trimming with or without comb attachment and contouring. The flexible hair guide follows the contours of the face and the Flexi-Guard Hair Deflector directs cut hairs towards the nozzle of the vacuum mechanism. It is recommended that you empty the Hair Collection Chamber after each trimming session. When trimming long, dense beards it may also be necessary to empty the Hair Collection Chamber during the trimming session in order to maintain optimal suction performance (also see 'Cleaning' section, 'Hair Collection Chamber').

- To ensure optimal functioning of the AccuVac System, do not cut off more than approx. 7mm of your overall beard length at a time. If you want to cut your beard shorter, repeat the process one or more times.

Trimming

- Use this Trimmer for its intended household use as described in this manual.
- Always comb your beard and/or moustache with a fine comb before you start trimming.
- If you are trimming for the first time, be careful. Do not move the Trimmer too fast. Make smooth and gentle movements.

Trimming With AccuControl Guide

Features

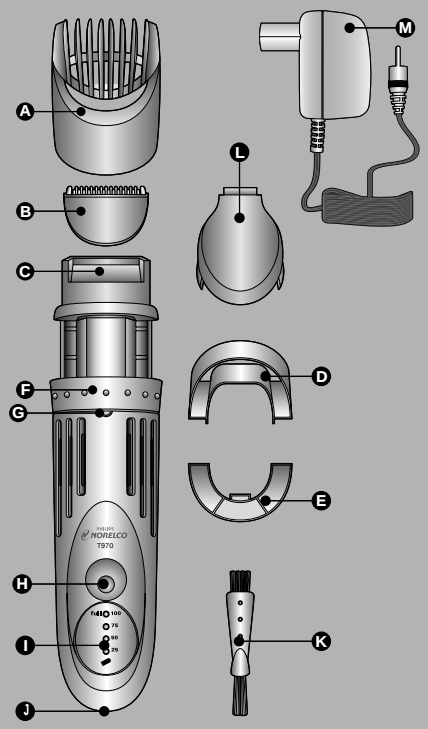

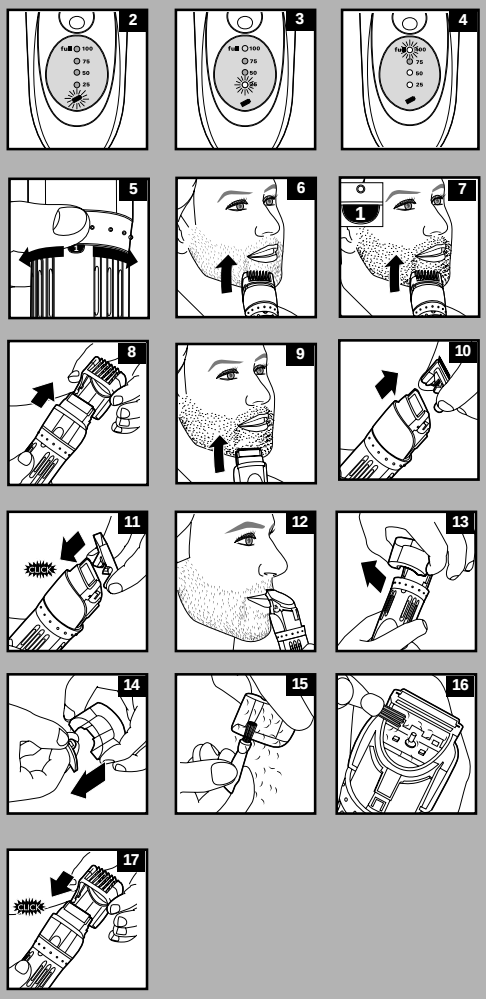

Trimming For "Stubble" Look

1 Be certain Guide Comb is on Trimmer and use setting #1 to result in a "stubble" look. (fig. 7).

Trimming Without Guide Comb Attachment

Remove Guide Comb Attachment if you are:
- Defining hair lines
- Trimming nape of neck
- Removing single, unwanted hairs

1 Be certain Trimmer is in the OFF position.

2 Remove the Guide Comb Attachment by pulling it off the Trimmer (fig. 8).

Never pull off the Guide Comb Attachment by grasping the flexible top portion. Always pull off by the bottom part of attachment.

3 Switch the Trimmer on.

4 Make well-controlled movements. Touch the hair lightly with the Trimmer (fig. 9).

Shaping With Precision Mini-Trimmer

- For use with moustache, to contour single hairs and sideburns.

1 Remove the Guide Comb Attachment (fig. 8).
  - Never pull off the Guide Comb Attachment by grasping the flexible top portion. Always pull off by the bottom part of attachment.

2 Remove the cutting unit (fig. 10).

3 Attach the Precision Mini-Trimmer (fig. 11).

Precision Mini-Trimmer is also suitable for outlining the edges of the beard, on the neck and on the cheeks.

4 Hold Trimmer in a vertical position and make small, careful strokes (fig. 12).

5 Turn Trimmer OFF.

6 When you have finished using the Precision Mini-Trimmer, you may remove it and replace the cutting unit. You can now put the Guide Comb Attachment back on the Trimmer.

Replacing Guide Comb Attachment On Trimmer

1 Be certain Trimmer is in OFF position.

2 Replace Guide Comb Attachment until it "clicks" into position. The Guide Comb Attachment can be placed on Trimmer only one way by properly aligning it to slide into the tracks on sides of Trimmer head. If it does not fit properly, reverse it.

NOTE: The Zoom Lock can be on any setting when removing or replacing Attachment.

Cleaning

- Always switch Trimmer OFF before cleaning.
- Do not use abrasive, scourers or liquids such as alcohol, benzene, bleach or acetone to clean the Trimmer.
- Never clean, remove or replace Guide Comb Attachment with motor ON.
- Do not apply pressure to cutters.
- Do not touch cutters with hard objects as this may damage them.
- Do not use while bathing, showering or immerse the Trimmer in water or other

Downloaded from www.Manualslib.com manuals search engine

Trimming Length Settings Table

#1	Stubble Length or Closely Cropped	.06 in./1.5 mm
#2	Short	.1 in./2.5 mm
#3		.16 in./4 mm
#4		.22 in./5.5 mm
#5	Medium	.3 in./7.5 mm
#6		.38 in./9.5 mm
#7		.48 in./12 mm
#8		.6 in./15 mm
#9	Long	.72 in./18 mm

2 Switch the Trimmer ON.

3 To trim in the most effective way, move the Trimmer against the direction of hair growth. Do not move the trimmer too fast. Make smooth and gentle movements and make sure the surface of the Guide Comb always stays in contact with the skin (fig. 6).

NOTE: Since all hairs do not grow in the same direction, you may want to try different trimming positions (i.e., upwards, downwards, or across). Practice is best for optimum results.

Downloaded from www.Manualslib.com manuals search engine

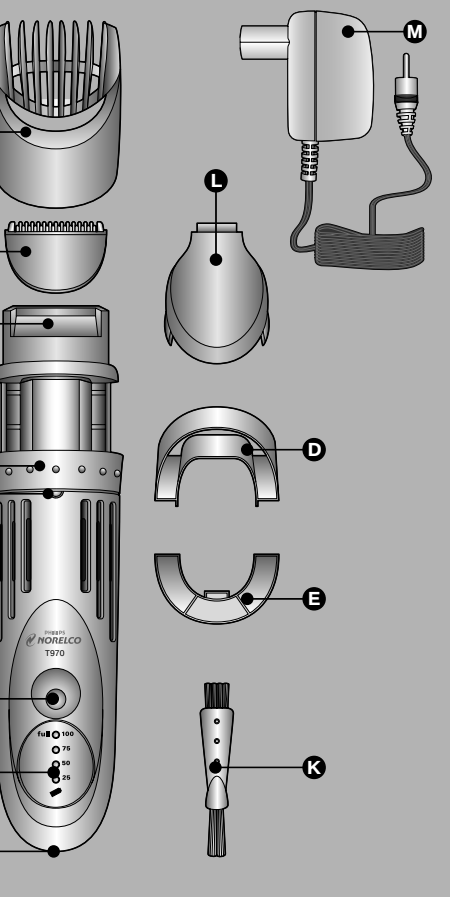

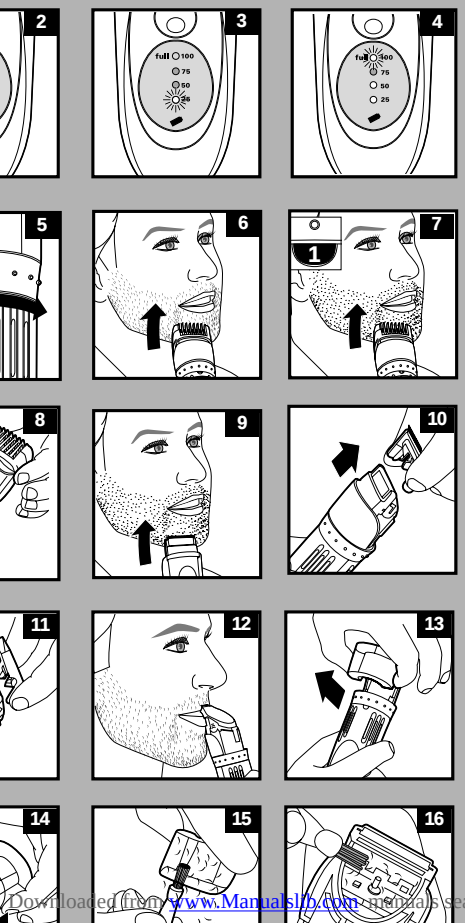

Trimming For “Stubble” Look

1 Be certain Guide Comb is on Trimmer and use setting #1 to result in a “stubble” look. (fig. 7).

Trimming Without Guide Comb Attachment

Remove Guide Comb Attachment if you are:

- Defining hair lines
- Trimming nape of neck
- Removing single, unwanted hairs

1 Be certain Trimmer is in the OFF position.

2 Remove the Guide Comb Attachment by pulling it off the Trimmer (fig. 8).

Never pull off the Guide Comb Attachment by grasping the flexible top portion. Always pull off by the bottom part of attachment.

3 Switch the Trimmer on.

4 Make well-controlled movements. Touch the hair lightly with the Trimmer (fig. 9).

Shaping With Precision Mini-Trimmer

- For use with moustache, to contour single hairs and sideburns.

1 Remove the Guide Comb Attachment (fig. 8).
  - Never pull off the Guide Comb Attachment by grasping the flexible top portion. Always pull off by the bottom part of attachment.

2 Remove the cutting unit (fig. 10).

3 Attach the Precision Mini-Trimmer (fig. 11).

Precision Mini-Trimmer is also suitable for outlining the edges of the beard, on the neck and on the cheeks.

4 Hold Trimmer in a vertical position and make small, careful strokes (fig. 12).

5 Turn Trimmer OFF.

6 When you have finished using the Precision Mini-Trimmer, you may remove it and replace the cutting unit. You can now put the Guide Comb Attachment back on the Trimmer.

Replacing Guide Comb Attachment On Trimmer

1 Be certain Trimmer is in OFF position.

2 Replace Guide Comb Attachment until it “clicks” into position. The Guide Comb Attachment can be placed on Trimmer only one way by properly aligning it to slide into the tracks on sides of Trimmer head. If it does not fit properly, reverse it.

NOTE: The Zoom Lock can be on any setting when removing or replacing Attachment.

- It is recommended that the Hair C Chamber be emptied and cleaned each use.
- Do not operate the Trimmer with Collection Chamber removed.

Trimmer:

1 Make sure the Trimmer is switch and disconnected from the electr outlet.

2 Remove the Guide Comb Attachr

3 Remove the cutting unit (fig. 10).

4 Clean the cutting unit and the ins Trimmer with the brush supplied

5 Re-attach the cutting unit and the Comb into place on the Trimmer

Replacing The Cutting Uni

If your cutters and filter become damage worn, do not continue using the Trimme Replace cutters and/or filter immediately

This Trimmer has no other user-servic parts. Any other service should be per by an Authorized Norelco Service Loc

Assistance

For Assistance or the Authorized Nor Service Location nearest you, call toll f

1-800-243-3050
or visit our website: www.norelc

Authorized Norelco Service Location information is available 24 hours a day week.

Storage

- Be sure Trimmer is turned off and cord from outlet and Trimmer bef storing in a safe, dry location wher not be crushed, banged, or subject damage.
- Do not wrap cord around Trimme storing.
- Store Cord in a safe location wher not be cut or damaged.
- Do not place or store Trimmer wh can fall or be pulled into a tub or s water or other liquid.

Battery Removal

- This Trimmer contains rechargeabl Cadmium batteries, which must be of properly.
- Batteries should only be removed Trimmer is to be discarded.
- Refer to Battery Removal instructio for directions on removing the rec batteries.

PHILIPS
NORELC
60-DAY MONE

Downloaded from www.Manualslib.com manuals search engine

ble

.06 in./1.5 mm
.1 in./2.5 mm
.16 in./4 mm
.22 in./5.5 mm
.3 in./7.5 mm
.38 in./9.5 mm
.48 in./12 mm
.6 in./15 mm
.72 in./18 mm

vay, move the
of hair
mer too fast.
ements and
Guide Comb
e skin (fig. 6).

e same direction,
positions (i.e.,
ce is best for

Cleaning

- Always switch Trimmer OFF before cleaning.
- Do not use abrasive, scourers or liquids such as alcohol, benzene, bleach or acetone to clean the Trimmer.
- Never clean, remove or replace Guide Comb Attachment with motor ON.
- Do not apply pressure to cutters.
- Do not touch cutters with hard objects as this may damage them.
- Do not use while bathing, showering or immerse the Trimmer in water or other liquids as damage to Trimmer may occur.
- Never use sharp or hard objects to clean the filter to avoid damaging it.
- If cut hairs have accumulated in the Guide Comb area, turn Trimmer off, pull Guide Comb Attachment off Trimmer and remove hairs by shaking and/or blowing.

Hair Collection Chamber

1 Switch the Trimmer off.

2 Remove the ClearView Hair Collection chamber and remove the hairs by shaking or brushing them out (fig. 13).

3 For extra thorough cleaning and to maintain optimal suction performance, detach the filter... (fig. 14).

4 ...and carefully clean the ClearView Hair Collection Chamber and the filter with the brush supplied (fig. 15).

- When trimming extremely long, dense beards, it may be necessary to empty the Hair Collection Chamber during the trimming session in order to maintain optimal suction performance.
- If suction performance is not as strong as usual, Hair Collection Chamber may require emptying to restore optimal performance.

BAC

If you are not fully
Moustache Trimm
you the full purcha

The Trimmer mu
insurance prepa
purchase price a
Trimmer must b
the date of purc
the purchase pri
to exceed sugge

Send dated sales
indicated below, a

Philips Domesti
A
N
450

Please allo

Name_____
Address____
City_____
State _____
Daytime Tele
Email Addres

REASON FO

_____
_____
_____
_____
_____
_____
_____
_____
_____
_____

Downloaded from www.Manualslib.com manuals search engine

or "Stubble" Look

uide Comb is on Trimmer
g #1 to result in a "stubble"

Vithout
o Attachment

omb Attachment if you are:
ines
e of neck
gle, unwanted hairs

immer is in the OFF position.

Guide Comb Attachment by
he Trimmer (fig. 8).

Guide Comb Attachment by
e top portion. Always pull off by
f attachment.

immer on.

ntrolled movements. Touch
y with the Trimmer (fig. 9).

h
ni-Trimmer

moustache, to contour single
burns.

Guide Comb Attachment

off the Guide Comb
by grasping the flexible
. Always pull off by the
t of attachment.

cutting unit (fig. 10).

ecision Mini-Trimmer (fig.

mmer is also suitable for outlining
eard, on the neck and on the

r in a vertical position and
areful strokes (fig. 12).

r OFF.

ve finished using the
i-Trimmer, you may remove
the cutting unit. You can
Guide Comb Attachment
Trimmer.

uide Comb Attachment
r

immer is in OFF position.

e Comb Attachment until it
osition. The Guide Comb

- It is recommended that the Hair Collection Chamber be emptied and cleaned out after each use.
- Do not operate the Trimmer with the Hair Collection Chamber removed.

Trimmer:

1. Make sure the Trimmer is switched OFF and disconnected from the electrical outlet.
2. Remove the Guide Comb Attachment.
3. Remove the cutting unit (fig. 10).
4. Clean the cutting unit and the inside of the Trimmer with the brush supplied (fig. 16).
5. Re-attach the cutting unit and the Guide Comb into place on the Trimmer (fig. 17).

Replacing The Cutting Unit

If your cutters and filter become damaged or worn, do not continue using the Trimmer. Replace cutters and/or filter immediately.

This Trimmer has no other user-serviceable parts. Any other service should be performed by an Authorized Norelco Service Location.

Assistance

For Assistance or the Authorized Norelco Service Location nearest you, call toll free:

1-800-243-3050
or visit our website: www.norelco.com

Authorized Norelco Service Location information is available 24 hours a day, 7 days a week.

Storage

- Be sure Trimmer is turned off and remove cord from outlet and Trimmer before storing in a safe, dry location where it will not be crushed, banged, or subject to damage.
- Do not wrap cord around Trimmer when storing.
- Store Cord in a safe location where it will not be cut or damaged.
- Do not place or store Trimmer where it can fall or be pulled into a tub or sink, water or other liquid.

Battery Removal

- This Trimmer contains rechargeable Nickel-Cadmium batteries, which must be disposed of properly.
- Batteries should only be removed when Trimmer is to be discarded.
- Refer to Battery Removal instruction sheet for directions on removing the rechargeable batteries.

PHILIPS
NORE

AccuVac

Beard and Moustache Trimmer

with Integrated Vacuum

T970
Rechargeable
Cord/Cordless

FULL TWO-YEAR WARRANTY

Philips Electronics North America Corpor
Norelco product, Model T-970 against
workmanship for a period of two years
years) from the date of purchase, and agree
defective product without charge.

IMPORTANT: This warranty does not
from accident, misuse or abuse, lack of rea
of any attachment not provided with the p
subjecting the product to any but the s
unauthorized replacement parts will void t

**PHILIPS ELECTRONICS NORTH AME
WILL NOT PAY FOR WARRANTY SER
A NON-AUTHORIZED REPAIR SERV
REIMBURSE THE CONSUMER FOR
FROM WARRANTY SERVICE PERF
AUTHORIZED REPAIR SERVICE.**

**NO RESPONSIBILITY IS ASSUMED
INCIDENTAL OR CONSEQUENTIAL D**

In order to obtain warranty service, simply
postage prepaid to the nearest Auth
Location. It is suggested that for your
shipments of product by insured mail, ins
occurring during shipment is not covered b
No other warranty, written or oral, i
Electronics North America Corporation.
specific legal rights, and you may also have
from state to state. Some states do not
limitation of incidental or consequential
exclusion and limitations may not apply to

*Read enclosed instructions carefully.

Manufactured for: Philips Domestic Appliances and
A Division of Philips Electronics North America Co
1010 Washington Blvd., Stamford, CT 06912-0015

UL LISTED This symbol on the product's nameplate m
listed by Underwriters Laboratories, Inc.

Norelco is a Registered Trademark of Philips Electr

Downloaded from www.Manualslib.com manuals search engine

placed on Trimmer
operly aligning it to
on sides of Trimmer
fit properly, reverse it.

can be on any setting
ng Attachment.

ner OFF before

scourers or liquids
zene, bleach or acetone
r.
e or replace Guide
with motor ON.
re to cutters.
s with hard objects as
m.
thing, showering or
er in water or other
Trimmer may occur.
hard objects to clean
maging it.
mulated in the Guide
mmer off, pull Guide
off Trimmer and remove
or blowing.

hamber

off.

iew Hair Collection
e the hairs by shaking
ut (fig. 13).

cleaning and to
ction performance,
g. 14).

the ClearView Hair
and the filter with the
15).

emely long, dense
cessary to empty the
mber during the
order to maintain
ormance.
ce is not as strong as
n Chamber may require
optimal performance.

PHILIPS NORELCO

60-DAY MONEY-BACK GUARANTEE

If you are not fully satisfied with your Norelco Beard and Moustache Trimmer, send the product back and we'll refund you the full purchase price.

The Trimmer must be shipped prepaid by insured mail, insurance prepaid, and have the sales receipt, indicating purchase price and the date of purchase, enclosed. The Trimmer must be postmarked no later than 60 days after the date of purchase. Norelco reserves the right to verify the purchase price of the Trimmer and limit refunds not to exceed suggested retail price.

Send dated sales receipt, your complete name and address as indicated below, and the Trimmer, prepaid to:

Philips Domestic Appliances and Personal Care Company
A Division of Philips Electronics
North America Corporation
450 North Medinah Road, Dock 16
Roselle, IL 60172-2329

Please allow 4-6 weeks for delivery of check.
(Please Print)

Name_____

Address_____

City_____

State _____Zip_____

Daytime Telephone No. (_____)_____
AREA CODE

Email Address:_____

REASON FOR RETURNING:_____

_____

_____

_____

_____

_____

_____

_____

_____

_____

_____

_____

AccuVac, ClearView, AccuControl and Z
Electronics North America Corporation

PHILIPS is a Registered Trademark of Ko
Philips Electronics N.V.

© 2005 Philips Electronics North Ameri

Downloaded from www.Manualslib.com manuals search engine

FULL TWO-YEAR WARRANTY

Philips Electronics North America Corporation warrants each new Norelco product, Model T-970 against defects in materials or workmanship for a period of two years (cutters for up to seven years) from the date of purchase, and agrees to repair or replace any defective product without charge.

IMPORTANT: This warranty does not cover damage resulting from accident, misuse or abuse, lack of reasonable care, the affixing of any attachment not provided with the product or loss of parts or subjecting the product to any but the specific voltage.* Use of unauthorized replacement parts will void this warranty.

PHILIPS ELECTRONICS NORTH AMERICA CORPORATION WILL NOT PAY FOR WARRANTY SERVICE PERFORMED BY A NON-AUTHORIZED REPAIR SERVICE AND WILL NOT REIMBURSE THE CONSUMER FOR DAMAGE RESULTING FROM WARRANTY SERVICE PERFORMED BY A NON-AUTHORIZED REPAIR SERVICE.

NO RESPONSIBILITY IS ASSUMED FOR ANY SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES.

In order to obtain warranty service, simply take or ship the product postage prepaid to the nearest Authorized Norelco Service Location. It is suggested that for your protection you return shipments of product by insured mail, insurance prepaid. Damage occurring during shipment is not covered by this warranty. **NOTE:** No other warranty, written or oral, is authorized by Philips Electronics North America Corporation. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above exclusion and limitations may not apply to you.

*Read enclosed instructions carefully.

Manufactured for: Philips Domestic Appliances and Personal Care Company
A Division of Philips Electronics North America Corporation
1010 Washington Blvd., Stamford, CT 06912-0015

UL LISTED This symbol on the product's nameplate means it is listed by Underwriters Laboratories, Inc.

Norelco is a Registered Trademark of Philips Electronics North America Corporation.

AccuVac, ClearView, AccuControl and Zoom Lock are Trademarks of Philips Electronics North America Corporation.

PHILIPS is a Registered Trademark of Koninklijke Philips Electronics N.V.

© 2005 Philips Electronics North America Corporation. All Rights Reserved.

Downloaded from www.Manualslib.com manuals search engine